



NIGHTHAWK QUICK START INSTRUCTIONS

Clear Show Memory

Power On,
Push Reset button, Scroll to (Reset Show Memory)
(Push Select)

Clear Fire Script

Power On,
Push Reset button, Scroll to (Reset Fire Script)
(Push Select)

Program controller

Power On,
Push Mode Button, Scroll to (Create Fire Script)
(Push Select) Enter cues, when finished
(Push Mode Button To Store)

Review Script

Power On,
Push Mode Button, Scroll to (Review Fire Script)
(Push Select) Push Select repeatedly to scroll
Through program.

Fire program (Stepped fire Mode)

Power On,
Arm Key On,
Dead Man Trigger Plugged in
Push Mode Button, Scroll to (Stepped Fire Mode)
(Push Select) Fire program by pulling trigger
At the tempo you wish until end of show.

Fire Program (Prompted fire Mode)

Power On
Arm Key On,
Push Mode Button, Scroll to (Prompted fire Mode)
(Push Select) Fire program by following the flashing Red Light.

Fire Program (Timed Fire Mode)

Power On,
Arm Key On,
Dead Man Trigger plugged in,
Push Mode Button, Scroll to (Timed Fire), (Push Select)
Hold down top button on Dead Man and Pull trigger,
Show will fire automatically by pre-programmed time.