

PYROMATE INC. **FIRING SYSTEMS**



SmartFire

SmartFire Wireless

***Pyromate Wireless Systems add more flexibility to your Pyromate Digital System**

***Pyromate's Wireless systems are industry proven; cutting edge digital spread spectrum technology 2 way transceivers.**

FEATURES

***Option of linkable transceiver packs that connect any two or more locations of standard Smart Modules, or stand alone Wireless Smart Modules.**

***Fully FCC Compliant (no license required).**

***Interference free Spread Spectrum (Hopping) Frequency**

***Operational distance of Up to 1 Mile.**

***In range Led Status**

***Power off sleep mode**

***Up to 4 additional Digital modules may be wired from receiver as independent slaves**

***May be used with conventionally wired shows or stand-alone wireless.**

***Same Rugged Underwater Cases as All Pyromate Systems**

***Limited 1-Year Warranty.**

INSTRUCTIONS

Attach Transmitter to Controller and place Wireless Receiver Booster pack or Wireless Module in field in normal manner. Power up transmitter then power up receiver in field and check for range status, Green good, Blue questionable, Purple Poor, Red Off/No connectivity, Try and achieve Green for maximum performance, Key may be left on and unit will sleep when transmitter is powered down and will awake when powered back up. Keep unit well charged at all times to preserve battery life

WARNING! 20' minimum distance between Antennas must be Maintained for Proper Operation.

Antennas must be elevated to achieve maximum potential; also line of sight is very important as well.